



# 更換橡膠管方法

## A method of Rubber hose Replacement

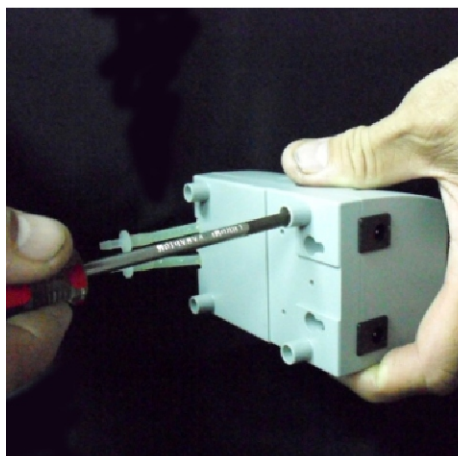

### 1. 下蓋4支螺絲拆掉

Unfasten the 4 screws in the back cover.

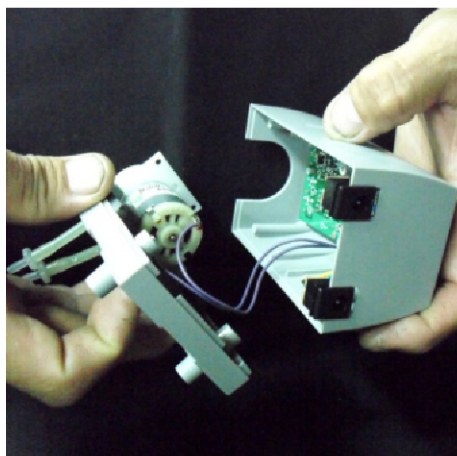

### 2. 打開上下蓋

Open upper and back cover.



### 3. 拔開馬達接線上的連接器

Pull up the power cable connector




### 4. 取出蠕動幫浦組件

Remove the dosing pump assembly



### 5. 用尖嘴鉗將幫浦的上邊卡鉤往外移開

Clamp pump's upper hook outward with a Needle-nosed pliers.

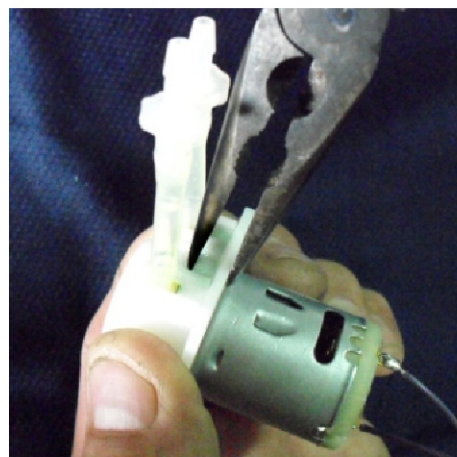

### 6. 依步驟5將幫浦的下邊卡鉤移開並掀開上蓋

Follow step 5 to clamp pump's lower hook outward and lift the cover up.



### 7. 分離上蓋組件

Loosen the cover assembly.



### 8. 取出橡膠管和滾筒驅動輪組件

Remove the hose as well as the assembly of drive wheel with rollers.



### 9. 反向操作完成換上新的橡膠管

Fit the new hose in reverse order.